

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
3DTECHPREVIEW	ACAD_Var	Specifies whether the 3D technical preview is turned on or off	-	2022		
ACADLSPASDOC	ACAD_Var	Controls whether the acad.lsp file is loaded into every drawing or just the first drawing opened in a session	-			
ACADPREFIX	ACAD_Var	Lists the Support File Search paths specified in the OPTIONS dialog box, Files tab	-			
ACADVER	ACAD_Var	Returns the product's version number	-			
ACTIVITYINSIGHTSPATH	ACAD_Var	Specifies the path where Activity Insights event log files are written or copied to	-	2024		
ACTIVITYINSIGHTSTATE	ACAD_Var	Indicates whether the Activity Insights palette is open or closed	-	2024		
ACTIVITYINSIGHTSVIEWEDLOGGING	ACAD_Var	Turns on\off the logging of 'Viewed' events	-	2024		
ACTPATH	ACAD_Var	Specifies the additional paths to load action macros from for playback	-			
ACTRECORDERSTATE	ACAD_Var	Specifies the current state of the Action Recorder	-			
ACTRECPATH	ACAD_Var	Specifies the path used to store new action macros	-			
ACTUI	ACAD_Var	Controls the behavior of the Action Recorder panel when recording and playing back macros	-			
ADCSTATE	ACAD_Var	Indicates whether the DesignCenter window is open or closed (ADCENTER)	-			
AFLAGS	ACAD_Var	Sets options for attributes	-			
ANGBASE	ACAD_Var	Sets the zero (0) base angle with respect to the current UCS	-			
ANGDIR	ACAD_Var	Sets the direction of positive angles	-			
ANNOALLVISIBLE	ACAD_Var	Hides or displays annotative objects that do not support the current annotation scale	-			
ANNOAUTOSCALE	ACAD_Var	Updates annotative objects to support the annotation scale when the annotation scale is changed	-			
ANNOMONITOR	ACAD_Var	Turns the annotation monitor on or off. When the annotation monitor is on, it flags all non-associative annotations by placing a badge on them	-	2013		
ANNOSCALEZOOM	ACAD_Var	Controls whether the mouse wheel ZOOM in paperspace viewports is controlled by specific zoom scales or is independent (legacy behavior)	-	2023		
ANNOTATEDWG	ACAD_Var	Specifies whether or not the drawing will behave as an annotative BLOCK when INSERTEd into another drawing	-			
APBOX	ACAD_Var	Turns the display of the AutoSnap aperture box on or off	-			
APERTURE	ACAD_Var	Controls the size of the object target box	-			
APPAUTOLOAD	ACAD_Var	Controls when plug-in applications are loaded	-			
APPLYGLOBALOPACITIES	ACAD_Var	Applies transparency settings to all palettes	-			
APSTATE	ACAD_Var	Indicates whether the Block Authoring Palettes window in the Block Editor is open or closed	-			
AREA (Var)	ACAD_Var	Stores the last area computed by the AREA command	-			
ARRAYASSOCIATIVITY	ACAD_Var	Sets the default behavior of new arrays to be associative or nonassociative	-	2013		
ARRAYEDITSTATE	ACAD_Var	Indicates whether the drawing is in the array editing state, which is activated while editing an associative array's source objects	-			
ARRAYTYPE	ACAD_Var	Specifies the default array type.	-			
ATTdia	ACAD_Var	Controls whether the INSERT command uses a dialog box for attribute value entry	-			
ATTIPE	ACAD_Var	Controls which Text Formatting toolbar is displayed with the in-place editor for modifying multiline attributes	-			
ATTMODE	ACAD_Var	Controls display of attributes	-			
ATTMULTI	ACAD_Var	Controls whether multiline attributes can be created	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
ATTREQ	ACAD_Var	Controls whether INSERT uses default attribute settings during insertion of BLOCKs	-			
AUDITCTL	ACAD_Var	Controls whether AUDIT creates an audit report *.adt file	-			
AUNITS	ACAD_Var	Sets units for angles	-			
AUPREC	ACAD_var	Sets the display precision for angular units and coordinates	-			
AUTODWFPUBLISH	ACAD_Var	Controls whether *.dwf (Design Web Format) files are created automatically when you save or close drawing *.dwg files	-			
AUTOMATICPUB	ACAD_Var	Controls whether electronic files (*.dwf, *.pdf) are created automatically when you save or close drawing *.dwg files	-			
AUTOPLACEMENT	ACAD_Var	Controls whether placement suggestions are displayed as you insert a BLOCK	-	2024		
AUTOSNAP	ACAD_Var	Controls the display of the AutoSnap marker, tooltip, and magnet	-			
BACKGROUNDPLOT	ACAD_Var	Controls whether background PLOTTing is turned on or off for plotting and publishing	-			
BACTIONBARMODE	ACAD_Var	Indicates whether the action bars or the legacy action objects are displayed in the BLOCK Editor	-			
BACTIONCOLOR	ACAD_Var	Sets the text color of actions in the Block Editor	-			
BCONSTATUSTMODE	ACAD_Var	Turns the constraint display status on and off and controls the shading of objects based on their constraint level	-			
BDEPENDENCYHIGHLIGHT	ACAD_Var	Controls whether or not dependent objects are dependency highlighted when a parameter, action, or grip is selected in the BLOCK Editor	-			
BGCOREPUBLISH	ACAD_Var	Controls whether background PUBLISH uses a single or multiple cores	-	2022		
BGRIPOBJCOLOR	ACAD_Var	Sets the COLOR of GRIPS in the BLOCK Editor	-			
BGRIPOBJSIZE	ACAD_Var	Sets the display size of custom grips in the BLOCK Editor relative to the screen display	-			
BINDTYPE	ACAD_var	Specifies the default or controls the naming behavior to be applied to "named objects" in an XREF when a bind or an edit-in-place operation is performed on it	-			
BLOCKCREATEMODE	ACAD_Var	Sets the behavior for selected objects after creating blocks with the BLOCK and -BLOCK commands	-	2022		
BLOCKEDITLOCK	ACAD_Var	Disallows opening of the BLOCK Editor and editing of dynamic block definitions	-			
BLOCKMRULIST	ACAD_Var	Controls the number of most recently used BLOCKs displayed in the Recent tab of the BLOCKs Palette	-	2020		
BLOCKNAVIGATE	ACAD_Var	Controls the file and BLOCKs that are displayed in the Other Drawing tab of the BLOCKs Palette	-	2020	2021	
BLOCKREDEFINEMODE	ACAD_Var	Controls whether a dialog box is displayed when INSERTing a BLOCK from the BLOCKs Palette with the same name as a BLOCK in the current drawing	-	2020	2022	
BLOCKSDATACOLLECTION	ACAD_Var	Controls whether the content data used during block replacement is sent to the data collection service	-	2024		
BLOCKSRECENTFOLDER	ACAD_Var	Sets the path where the recently INSERTed or created BLOCKs are stored	-	2021		
BLOCKSTATE	ACAD_Var	Reports whether the BLOCKs Palette is open or closed	-	2020		
BLOCKSYNCFOLDER	ACAD_Var	Sets the path where the recent and favorite BLOCKs are stored	-	2021.1		
BLOCKTESTWINDOW	ACAD_Var	Indicates whether or not a test BLOCK window is current	-			
BPARAMETERCOLOR	ACAD_Var	Sets the COLOR of PARAMETERS in the BLOCK Editor	-			
BPARAMETERFONT	ACAD_Var	Sets the font used for PARAMATERS and actions in the BLOCK Editor	-			
BPARAMETERSIZE	ACAD_Var	Sets the size of parameter text and features in the BLOCK Editor relative to the screen display	-			
BPTEXTHORIZONTAL	ACAD_Var	Forces the text displayed for action parameters and constraint parameters in the BLOCK Editor to be horizontal	-			
BTMARKDISPLAY	ACAD_Var	Controls whether or not value set markers are displayed for dynamic BLOCK references	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
BVMODE	ACAD_Var	Controls how objects that are made invisible for the current visibility state are displayed in the BLOCK Editor	-			
CACHEMAXFILES	ACAD_var	Sets the maximum number of graphics cache files saved for the product	-	2013		
CACHEMAXTOTALSIZE	ACAD_Var	Sets the maximum total size of all graphics cache files saved for the product	-	2013		
CALCINPUT	ACAD_Var	Controls whether mathematical expressions and global constants are evaluated in text and numeric entry boxes of windows and dialog boxes	-			
CANNOSCALE	ACAD_Var	Sets the name of the current annotation scale for the current space	-			
CANNOSCALEVALUE	ACAD_Var	Displays the value of the current annotation scale	-			
CAPTURETHUMBNAILS	ACAD_Var	Specifies if and when thumbnails are captured for the Rewind tool	-			
CBARTRANSPARENCY	ACAD_Var	Controls the transparency of the constraint bars	-			
CCONSTRAINTFORM	ACAD_Var	Controls whether annotational or dynamic constraints are applied to objects	-			
CDATE	ACAD_Var	Stores the current date and time in coded decimal format	-			
CECOLOR	ACAD_Var	Sets the color of new objects	-			
CELTSCALE	ACAD_Var	Sets the current object linetype scaling factor	-			
CELTTYPE	ACAD_Var	Sets the LINETYPE of new objects	-			
CELWEIGHT	ACAD_Var	Sets the linewidth of new objects.	-			
CENTERCROSSGAP	ACAD_Var	Determines the gap between the CENTERMARK mark and its centerlines	-	2017		
CENTERCROSSSIZE	ACAD_Var	Determines the size of the associative CENTERMARK	-	2017		
CENTEREXE	ACAD_Var	Controls the length of the CENTERLINE extensions	-	2017		
CENTERLAYER	ACAD_Var	Specifies a default LAYER for new CENTERMARKs or CENTERLINES	-			
CENTERLTSCALE	ACAD_Var	Sets the linetype scale used by CENTERMARKs and CENTERLINES	-	2017		
CENTERLTYPE	ACAD_Var	Specifies the linetype used by CENTERMARKs and CENTERLINES	-	2017		
CENTERLTYPEFILE	ACAD_Var	Specifies the loaded linetype library file used to create center marks and CENTERLINES	-			
CENTERMARKEXE	ACAD_Var	Determines whether CENTERLINES extend automatically from new center marks	-	2017		
CENTERMT	ACAD_Var	Controls how GRIPS stretch multiline text that is centered horizontally	-			
CETRANSPARENCY	ACAD_Var	Sets the transparency level for new objects	-			
CGEOCS	ACAD_Var	Stores the name of the GIS coordinate system assigned to the drawing file	-	2014		
CHAMFERA	ACAD_Var	Sets the first chamfer distance when CHAMMODE is set to 0	-			
CHAMFERB	ACAD_Var	Sets the second chamfer distance when CHAMMODE is set to 0	-			
CHAMFERC	ACAD_Var	Sets the chamfer length when CHAMMODE is set to 1	-			
CHAMFERD	ACAD_Var	Sets the chamfer angle when CHAMMODE is set to 1	-			
CHAMMODE	ACAD_Var	Sets the input method for CHAMFER	-			
CIRCLERAD	ACAD_Var	Sets the default CIRCLE radius	-			
CLASSICKEYS	ACAD_Var	Sets the behavior of several control keys between DOS and WINDOWS standards	-	2011		
CLAYER	ACAD_Var	Sets the current LAYER	-			
CLAYOUT	ACAD_Var	Sets the current LAYOUT	-	2014		
CLEANSCREENSTATE	ACAD_Var	Indicates whether the clean screen state is on or off	-			
CLIPROMPTLINES	ACAD_Var	Sets how many temporary prompt lines are displayed when an undocked command window is set to display just the prompt line	-	2013		

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
CLIPROMPTUPDATE	ACAD_Var	Controls whether the command line displays the messages and prompts generated while an AutoLISP or SCRIPT file is being executed	-	2013		
CLISTATE	ACAD_Var	Indicates whether the COMMANDLINE is open or closed	-			
CLOUDCOLLABMODIFIEDOPTION	ACAD_Var	Controls when documents (*.dwg and *.dwt) are unlocked in BIM 360 after they are closed in AutoCAD	-	2022		
CMDACTIVE	ACAD_Var	Indicates whether an ordinary command, transparent command, SCRIPT or dialog box is active	-			
CMDDIA	ACAD_Var	Controls the display of the In-Place Text Editor for the DIMEDIT and QLEADER commands, and the display of certain dialog boxes in AutoCAD-based products	-			
CMDECHO	ACAD_Var	Controls whether prompts and input are echoed during the AutoLISP command function	-			
CMDINPUTHISTORYMAX	ACAD_Var	Sets the maximum number of previous input values that are stored for a prompt in a command	-			
CMDNAMES	ACAD_Var	Displays the names of the active and transparent commands	-			
CMFADECOLOR	ACAD_Var	Controls the amount of black blended on all attached coordination models	-	2016		
CMFADEOPACITY	ACAD_Var	Controls the amount of dimming through transparency for all attached coordination models	-	2016		
CMLEADERSTYLE	ACAD_Var	Sets the name of the current multileader style	-			
CMLJUST	ACAD_Var	Specifies multiline justification	-			
CMOSNAP	ACAD_Var	Determines whether object snapping is active for geometry in coordination models that are attached to the drawing	-	2016		
COMMANDMACROSTATE	ACAD_Var	Indicates whether the Command Macros palette is open or closed	-	2023		
COMMANDPREVIEW	ACAD_Var	Controls whether a preview of the possible outcome of the command is displayed	-	2015		
COMMENTHIGHLIGHT	ACAD_Var	Controls the display of the indicator badge on PDF text comments	-	2024		
COMPARECOLOR1	ACAD_Var	Sets the COLOR of the objects that only exists in the first drawing in the resultant COMPAREd drawing file	-	2019		
COMPARECOLOR2	ACAD_Var	Sets the COLOR of the objects that only exists in the second drawing in the resultant COMPAREd drawing file	-	2019		
COMPARECOLORCOMMON	ACAD_Var	Displays the objects that are identical in both the drawings that are being COMPAREd	-	2019		
COMPAREFRONT	ACAD_Var	Controls the default display order of overlapping objects in the COMPARE result drawing	-	2019		
COMPAREHATCH	ACAD_Var	Controls whether HATCH objects are included in the drawing comparison	-	2019		
COMPAREPROPS	ACAD_Var	Controls whether a change in a non-geometric (display) property is identified as a change between two drawings revisions	-	2019		
COMPARERCMARGIN	ACAD_Var	Specifies the offset distance from the bounding box of a revision cloud that contains the object differences in the COMPARE result drawing	-	2019		
COMPARERCSHAPE	ACAD_Var	Controls whether nearby individual changes are merged as a single large rectangle or a series of smaller rectangles in the COMPARE result drawing	-	2019		
COMPARESHOW1	ACAD_Var	Displays the objects that exists only in the first drawing	-	2019		
COMPARESHOW2	ACAD_Var	Displays the objects that exists only in the second drawing	-	2019		
COMPARESHOWCOMMON	ACAD_Var	Displays the objects that exists only in the second drawing	-	2019		
COMPARESHOWCONTEXT	ACAD_Var	Controls the visibility of objects that are not used in the XREF comparison	-	2021		
COMPARESHOWRC	ACAD_Var	Shows a revision cloud around the difference in the COMPARE result drawing	-	2019		
COMPARETEXT	ACAD_Var	Controls whether text objects are included in the drawing comparison	-	2019		
COMPARETOLERANCE	ACAD_Var	Specifies the tolerance used when comparing two drawing files-entities are considered identical if they are below or equal to a specified decimal point value	-	2019		
COMPLEXLTPREVIEW	ACAD_Var	Controls whether a preview of the complex linetype is displayed during interactive operations	-	2015		

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
CONSTRAINTINFER	ACAD_Var	Controls whether the geometric constraints are inferred while creating and editing geometry	-			
CONSTRAINTNAMEFORMAT	ACAD_Var	Controls the text format for dimensional constraints	-			
CONTENTEXPLORERSTATE	ACAD_Var	Indicates whether the Content Explorer window is open or closed	-	2012	2017	
COORDS	ACAD_Var	Controls whether the cursor position on the STATUSBAR is updated continuously or at specific times only. It also controls the format in which the coordinates are displayed	-			
COPYMODE	ACAD_Var	Controls whether the COPY command repeats automatically	-			
COUNTCHECK	ACAD_Var	Controls the types of errors to check in the COUNT	-	2022		
COUNTCOLOR	ACAD_Var	Sets the highlighting color on objects in a COUNT	-	2022		
COUNTERRORCOLOR	ACAD_Var	Sets the highlighting color on objects that can cause potential errors in a COUNT	-	2022		
COUNTERNUM	ACAD_Var	Displays the number errors in the current COUNT	-	2022		
COUNTPALETTTESTATE	ACAD_Var	Reports whether the COUNT Palette is open or closed	-	2022		
COUNTSERVICE	ACAD_Var	Controls the background indexing of the COUNT	-	2022		
CPLOTSTYLE	ACAD_Var	Controls the current plot style for new objects	-			
CSHADOW	ACAD_Var	Sets the shadow display property for a 3D object	-		2017	
CTAB	ACAD_Var	Determines whether the drawing area displays the Model tab or a specified LAYOUT Tab	-			
CURSORBADGE	ACAD_Var	Determines whether the cursor badge are displayed in the drawing area	-		2015	
CURORSIZE	ACAD_Var	Determines the size of the crosshairs as a percentage of the screen size	-			
CURSORTYPE	ACAD_Var	Determines the cursor displayed by your pointing device	-		2017	
DATALINKNOTIFY	ACAD_Var	Controls the notification for updated or missing data links	-			
DATE	ACAD_Var	Stores the current date and time in Modified Julian Date format	-			
DBCSTATE	ACAD_Var	Indicates whether the dbConnect Manager is open or closed	-			
DBLCLKEDIT	ACAD_Var	Controls the double click editing behavior in the drawing area	-		2008	
DBMOD	ACAD_Var	Indicates the drawing modification status	-			
DCTCUST	ACAD_Var	Displays the path and file name of the current custom SPELLing dictionary	-			
DCTMAIN	ACAD_Var	Displays the three letter keyword for the current main SPELLing dictionary	-			
DEFPLSTYLE	ACAD_Var	Specifies the default plot style for all layers in a drawing when opening a drawing that was created in a release prior to AutoCAD 2000, or for Layer 0 when creating a new drawing from scratch without using a drawing template	-			
DEFPLSTYLE	ACAD_Var	Specifies the default plot style for new objects in a drawing when opening a drawing that was created in a release prior to AutoCAD 2000, or when creating a new drawing from scratch without using a drawing template	-			
DELOBJ	ACAD_Var	Controls whether geometry used to create other objects is retained or deleted	-			
DEMANDLOAD	ACAD_Var	Specifies if and when to demand-load certain applications	-			
DESIGNFEEDSTATE	ACAD_Var	Indicates whether the Design Feed palette is open or closed	-	2014	2017, 2019 (RIP)	
DGNFRAME	ACAD_Var	Determines whether *.dgn underlay frames are visible or plotted in the current drawing	-			
DGNIMPORTMAX	ACAD_Var	Sets the maximum number of elements that are translated when importing a *.dgn	-			
DGNIMPORTMODE	ACAD_Var	Controls the default behavior of the DGNIMPORT command	-			
DIMADEC	ACAD_Var	Controls the number of precision places displayed in angular dimensions	-			
DIMALT	ACAD_Var	Controls the display of alternate units in dimensions	-			
DIMALTD	ACAD_Var	Controls the number of decimal places in alternate units	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
DIMALTF	ACAD_Var	Controls the multiplier for alternate units	-			
DIMALTRND	ACAD_Var	Rounds off the alternate dimension units	-			
DIMALTU	ACAD_Var	Sets the units format for alternate units of all dimension substyles except Angular	-			
DIMALTZ	ACAD_Var	Controls the suppression of zeros for alternate unit dimension values	-			
DIMANNO	ACAD_Var	Indicates whether or not the current DIMSTYLE is annotative	-			
DIMAPOST	ACAD_Var	Specifies a text prefix or suffix (or both) to the alternate dimension measurement for all types of dimensions except angular	-			
DIMARCSYM	ACAD_Var	Controls display of the arc symbol in an arc length dimension	-			
DIMASSOC	ACAD_Var	Controls the associativity of dimension objects and whether dimensions are exploded	-			
DIMASZ	ACAD_Var	Controls the size of dimension line and leader line arrowheads. Also controls the size of hook lines	-			
DIMATFIT	ACAD_Var	Determines how dimension text and arrows are arranged when space is not sufficient to place both within the extension lines	-			
DIMAUNIT	ACAD_Var	Sets the units format for angular dimensions	-			
DIMAZIN	ACAD_Var	Suppresses zeros for angular dimensions	-			
DIMBLK	ACAD_var	Sets the arrowhead block displayed at the ends of dimension lines	-			
DIMBLK1	ACAD_var	Sets the arrowhead for the first end of the dimension line when DIMSAH is on	-			
DIMBLK2	ACAD_Var	Sets the arrowhead for the second end of the dimension line when DIMSAH is on	-			
DIMCEN	ACAD_Var	Controls drawing of circle or arc center marks and centerlines by the DIMCENTER, DIMDIAMETER and DIMRADIUS commands	-			
DIMCLRD	ACAD_Var	Assigns colors to dimension lines, arrowheads, and dimension leader lines	-			
DIMCLRE	ACAD_Var	Assigns colors to extension lines, center marks, and centerlines	-			
DIMCLRT	ACAD_Var	Assigns colors to dimension text	-			
DIMCONTINUEMODE	ACAD_Var	Determines whether the style of a continued DIDimension is based on the DIDimension that is being continued or on the current DIMSTYLE	-	2014		
DIMDEC	ACAD_Var	Sets the number of decimal places displayed for the primary units of a dimension	-			
DIMDLE	ACAD_Var	Sets the distance the dimension line extends beyond the extension line when oblique strokes are drawn instead of arrowheads	-			
DIMDLI	ACAD_Var	Controls the spacing of the dimension lines in baseline dimensions	-			
DIMDSEP	ACAD_Var	Specifies a single-character decimal separator to use when creating dimensions whose unit format is decimal	-			
DIMEXE	ACAD_Var	Specifies how far to extend the extension line beyond the dimension line	-			
DIMEXO	ACAD_Var	Specifies how far extension lines are offset from origin points	-			
DIMFIT	ACAD_Var		-		DIMATFIT, DIM	
DIMFRAC	ACAD_Var	Sets the fraction format when DIMLUNIT is set to 4 (Architectural) or 5 (Fractional)	-			
DIMFXL	ACAD_Var	Sets the total length of the extension lines starting from the dimension line toward the dimension origin	-			
DIMFXLON	ACAD_Var	Controls whether extension lines are set to a fixed length	-			
DIMGAP	ACAD_Var	Sets the distance around the dimension text when the dimension line breaks to accommodate dimension tekst	-			
DIMJOGANG	ACAD_Var	Determines the angle of the transverse segment of the dimension line in a jogged radius dimension	-			
DIMJUST	ACAD_Var	Controls the horizontal positioning of dimension text	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
DIMLAYER	ACAD_Var	Specifies a default LAYER for new dimensions	-			
DIMLDRBLK	ACAD_Var	Specifies the arrow type for QLEADERS	-			
DIMLFAC	ACAD_Var	Sets a scale factor for linear dimension measurements	-			
DIMLTEX1	ACAD_Var	Sets the linetype of the first extension line	-			
DIMLTEX2	ACAD_Var	Sets the linetype of the second extension line	-			
DIMLTYPE	ACAD_Var	Sets the linetype of the dimension line	-			
DIMLUNIT	ACAD_Var	Sets units for all dimension types except Angular	-			
DIMLWD	ACAD_Var	Assigns linewidth to dimension lines	-			
DIMLWE	ACAD_Var	Assigns linewidth to extension lines	-			
DIMPICKBOX	ACAD_Var	Sets the object selection target height, in pixels within the DIM command	-	2016		
DIMPOST	ACAD_Var	Specifies a text prefix or suffix (or both) to the dimension measurement	-			
DIMRND	ACAD_Var	Rounds all dimensioning distances to the specified value	-			
DIMSCALE	ACAD_Var	Sets the overall scale factor applied to dimensioning variables that specify sizes, distances, or offsets	-			
DIMSD1	ACAD_Var	Controls suppression of the first dimension line and arrowhead	-			
DIMSD2	ACAD_Var	Controls suppression of the second dimension line and arrowhead	-			
DIMSE1	ACAD_Var	Suppresses display of the first extension line	-			
DIMSE2	ACAD_Var	Suppresses display of the second extension line	-			
DIMTAD	ACAD_Var	Controls the vertical position of text in relation to the dimension line	-			
DIMTFAC	ACAD_Var	Specifies a scale factor for the text height of fractions and tolerance values relative to the dimension text height, as set by DIMTXT	-			
DIMTFILL	ACAD_Var	Controls the background of dimension text	-			
DIMTFILLCLR	ACAD_Var	Sets the color for the text background in dimensions	-			
DIMTIH	ACAD_Var	Controls the position of dimension text inside the extension lines for all dimension types except Ordinate	-			
DIMTIX	ACAD_Var	Draws text between extension lines	-			
DIMMOVE	ACAD_Var	Sets dimension text movement rules	-			
DIMTOFL	ACAD_Var	Controls whether a dimension line is drawn between the extension lines even when the text is placed outside	-			
DIMTOH	ACAD_Var	Controls the position of dimension text outside the extension lines	-			
DIMTXSTY	ACAD_Var	Specifies the text STYLE of the dimension	-			
DIMTXT	ACAD_Var	Specifies the height of dimension text, unless the current text style has a fixed height	-			
DIMTXTCLRT	ACAD_Var	Specifies the text STYLE of the dimension	-			
DIMXTDIRECTION	ACAD_Var	Specifies the reading direction of the dimension text	-			
DIMXTRULER	ACAD_Var	Controls the display of ruler when editing a dimension tekst	-	2016		
DIMUPT	ACAD_Var	Controls options for user-positioned tekst	-			
DIMZIN	ACAD_Var	Controls the suppression of zeros in the primary unit value	-			
DISPSILHBLOCKS	ACAD_Var	Controls the display of 3D solid silhouettes in BLOCKs in the 2D Wireframe visual style	-	2022.1		
DONUTID	ACAD_Var	Sets the default for the inside diameter of a donut	-			
DONUTOD	ACAD_Var	Sets the default for the outside diameter of a donut	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
DRAWORDERCTL	ACAD_Var	Controls the default display behavior of overlapping objects when they are created or edited	-			
DRSTATE	ACAD_Var	Indicates whether the Drawing Recovery Manager window is open or closed	-			
DTEXTED	ACAD_Var	Specifies the user interface displayed for editing single-line TEXT	-			
DWFFFRAME	ACAD_Var	Determines whether *.dwf or *.dwfx underlay frames are visible or plotted in the current drawing	-			
DWFOSNAP	ACAD_Var	Determines whether object snapping is active for geometry in *.dwf or *.dwfx underlays that are attached to the drawing	-			
DWGCHECK	ACAD_Var	Checks drawings for potential problems when opening them	-			
DWGHISTORYSTATE	ACAD_Var	Reports whether the Drawing History Palette is open or closed	-	2021		
DXEVAL	ACAD_Var	Controls when data extraction tables are compared against the data source, and if the data is not current, displays an update notification	-			
DYNDIGRIP	ACAD_Var	Controls which dynamic dimensions are displayed during grip stretch editing	-			
DYNINFOTIPS	ACAD_Var	Controls whether tips are displayed for using [Shift] and [Ctrl] when editing with grips	-			
DYNMODE	ACAD_Var	Turns Dynamic Input features on and off	-			
DYNPICOORDS	ACAD_Var	Controls whether pointer input uses relative or absolute format for coordinates	-			
DYNPIFORMAT	ACAD_Var	Controls whether pointer input uses polar or Cartesian format for coordinates	-			
DYNPIVIS	ACAD_Var	Controls when pointer input is displayed	-			
DYNPROMPT	ACAD_Var	Controls display of prompts in Dynamic Input tooltips	-			
DYNTOOLTIPS	ACAD_Var	Controls which tooltips are affected by tooltip appearance settings	-			
EDGE MODE	ACAD_Var	Controls how the TRIM and EXTEND commands determine cutting and boundary edges	-			
ELEVATION	ACAD_Var	Stores the current elevation of new objects relative to the current UCS	-			
EPDFSHX	ACAD_Var	Controls whether text objects using *.shx fonts are stored in *.pdf files as comments when you export a drawing as a *.pdf. In the future, the name will change to PDFSHX	-	2016	2017	PDFSHX-var
ERHIGHLIGHT	ACAD_Var	Controls whether reference names or reference objects are highlighted when their counterparts are selected in the XREF palette or in the drawing window	-			
ERSTATE	ACAD_Var	Indicates whether the External References (XREF) palette is open or closed	-			
EXPLMODE	ACAD_Var	Controls whether the EXPLODE command supports nonuniformly scaled (NUS) blocks	-			
EXPVALUE	ACAD_Var	Specifies the exposure value to apply during RENDERing	-	2016		
EXPWHITEBALANCE	ACAD_Var	Specifies the Kelvin color temperature (white balance) value to apply during RENDERing	-	2016		
EXTNAMES	ACAD_Var	Controls the characters accepted for the names of BLOCKs, dimension styles, LAYERs, and other named objects	-	2000		
FASTSHADEMODE	ACAD_Var	Specifies whether the new cross platform 3D graphics system is turned on or off	-	2023		
FBXIMPORTLOG	ACAD_Var	Controls whether a log file is created when you import an *.fbx file from 3DS Max into AutoCAD	-		2019 (RIP)	
FIELDDISPLAY	ACAD_Var	Controls whether FIELDds are displayed with a gray background	-			
FIELDEVAL	ACAD_Var	Controls how FIELDS are updated	-			
FILEDIA	ACAD_Var	Suppresses display of file navigation dialog boxes	-			
FILETABPREVIEW	ACAD_Var	Controls the type of preview, list view or thumbnail view, when you hover over a file tab	-	2014		
FILETABSTATE	ACAD_Var	Indicates the display status of the file tabs at the top of the drawing area	-	2014		
FILETABTHUMBOVER	ACAD_Var	Specifies whether the corresponding model or layout loads in the drawing window when you hover over a file tab thumbnail	-	2014		
FILLETPOLYARC	ACAD_Var	Determines the fillet behavior for PLINEs that include ARCs, either current or legacy	-	2019		

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
FILLET_RAD	ACAD_Var	Stores the current FILLET radius for 2D objects	-			
FILLMODE	ACAD_Var	Specifies whether HATCHes and fills, 2D SOLIDS, and wide PLINES are filled in	-			
FONTALT	ACAD_Var	Specifies the alternate font to be used when the specified font file cannot be located	-			
FONTPMAP	ACAD_Var	Specifies the font mapping file to be used for substituting fonts	-			
FRAME	ACAD_Var	Controls the display of frames for all IMAGEs, map images, underlays, clipped XREFs, and WIPEOUT objects	-			
FRAMESELECTION	ACAD_Var	Controls whether the hidden frame of an IMAGE, underlay, clipped XREF, or WIPEOUT can be SELECTEd	-			
FULLOPEN	ACAD_Var	Indicates whether the current drawing is partially open	-			
GALLERYVIEW	ACAD_Var	Controls the type of preview in the RIBBON drop-down galleries	-	2016		
GEOLATLONGFORMAT	ACAD_Var	Controls the format of the latitude and longitude values in the Geographic Location dialog box and the STATUSBAR	-			
GEOMARKERVISIBILITY	ACAD_Var	Controls the visibility of geographic markers	-			
GEOMARKPOSITIONSIZE	ACAD_Var	Specifies the scale factor to use for POINT objects and MTEXT objects when creating position markers	-	2014		
GFCLR1	ACAD_Var	Specifies the color for a one-color GRADIENT fill or the first color for a two-color GRADIENT fill	-			
GFCLR2	ACAD_Var	Specifies the second color for a two-color GRADIENT fill	-			
GLOBALOPACITY	ACAD_Var	Controls transparency level for all palettes	-			
GRIDDISPLAY	ACAD_Var	Controls the display behavior and display limits of the GRID	-			
GRIDMAJOR	ACAD_Var	Controls the frequency of major GRID lines compared to minor GRID lines	-			
GRIDMODE	ACAD_Var	Specifies whether the grid is turned on or off	-			
GRIDSTYLE	ACAD_Var	Controls whether the GRID displays as dots or lines	-			
GRIDUNIT	ACAD_Var	Specifies the GRID spacing (X and Y) for the current viewport	-			
GRIPBLOCK	ACAD_Var	Controls the display of GRIPS in BLOCKs	-			
GRIPS	ACAD_Var	Controls the display of grips on SELECTEd objects	-			
GROUPDISPLAYMODE	ACAD_Var	Controls how grips are displayed when group selection is turned on and an object in a GROUP is selected	-			
HIDEPRECISION	ACAD_Var	Controls the precision of HIDE and SHADE operations	-	2018 (RIP)		
HIDEXREFSCALES	ACAD_Var		-			
HIGHLIGHT	ACAD_Var	Controls object highlighting, does not affect objects selected with GRIPS	-			
HIGHLIGHTSMOOTHING	ACAD_Var	Controls the anti-aliasing effect on object highlighting	-	2015	2020 (RIP)	
HPANG	ACAD_Var	Sets the angle for new HATCH patterns	-			
HPANNOTATIVE	ACAD_Var	Controls whether a new HATCH pattern is annotative	-			
HPASSOC	ACAD_Var	Controls whether HATCHes and fills are associative	-			
HPBACKGROUNDCOLOR	ACAD_Var	Controls the background color for HATCH patterns	-			
HPBOUND	ACAD_Var	Controls the object type created by HATCH and BOUNDARY	-			
HPBOUNDRETAIN	ACAD_Var	Controls whether boundary objects are created for new HATCHes and fills	-			
HPCOLOR	ACAD_Var	Sets a default COLOR for new HATCHes	-			
HPDGLMODE	ACAD_Var	Controls the display of the HATCH and GRADIENT dialog box and the HATCH Edit dialog box	-			
HPDOUBLE	ACAD_Var	Specifies HATCH pattern doubling for user-defined patterns	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
HPDRAWORDER	ACAD_Var	Controls the draw order of HATCHes and fills	-			
HGPAPTOLE	ACAD_Var	Treats a set of objects that almost enclose an area as a closed HATCH boundary	-			
HPINHERIT	ACAD_Var	Controls whether to inherit the HATCH origin when using the Inherit Properties option in HATCH and HATCHEDIT	-			
HPISLANDDETECTION	ACAD_Var	Controls how islands within the HATCH boundary are treated	-			
HPLAYER	ACAD_Var	Specifies a default LAYER for new HATCHes and fills	-			
HPLINETYPE	ACAD_Var	Controls how non-continuous linetypes are displayed in HATCH patterns	-	2015		
HPMAXAREAS	ACAD_Var	Sets the maximum number of enclosed areas that a single HATCH object can have and still automatically switch between solid and pattern HATCHes during ZOOM operations	-			
HPMAXLINES	ACAD_Var	Sets the maximum number of HATCH lines that are generated in a HATCH operation	-			
HPNAME	ACAD_Var	Sets the default HATCH pattern name	-			
HPOBJWARNING	ACAD_Var	Sets the number of HATCH boundary objects that can be selected before displaying a warning message	-			
HPORIGIN	ACAD_Var	Sets the hatch origin point for new HATCH patterns relative to the current user coordinate system (UCS)	-			
HPORIGINMODE	ACAD_Var	Controls how the default HATCH origin point is determined	-			
HPPICKMODE	ACAD_Var	Sets whether the default method for identifying what to HATCH is to select a point or to select an object	-	2014		
HPQUICKPREVIEW	ACAD_Var	Controls whether a HATCH preview is displayed when specifying a HATCH area	-			
HPQUICKPREVTIMEOUT	ACAD_Var	Sets the maximum time for a HATCH preview to generate before the preview is automatically cancelled	-			
HPSCALE	ACAD_Var	Sets the HATCH pattern scale factor	-			
HPSEPARATE	ACAD_Var	Controls whether a single HATCH object or separate HATCH objects are created when operating on several closed boundaries	-			
HPSPACE	ACAD_Var	Sets the HATCH pattern line spacing for user-defined patterns	-			
HPTRANSPARENCY	ACAD_Var	Sets the default transparency for new HATCHes and fills	-			
HQGEOM	ACAD_Var	Enables image-based lighting and specifies the current image map	-	2016	2020 (RIP)	GRAPHICSCONF
HYPERLINKBASE	ACAD_Var	Specifies the path used for all relative hyperlinks in the drawing	-			
IBLENvironment	ACAD_Var	Enables image-based lighting and specifies the current image map	-	2016		
IMAGEFRAME	ACAD_Var	Controls whether IMAGE frames are displayed and plotted	-		2015	
INDEXCTL	ACAD_Var	Controls whether LAYER and spatial indexes are created and saved in drawing files	-			
INPUTHISTORYMODE	ACAD_Var	Controls the content and location of the user input history	-			
INPUTSEARCHDELAY	ACAD_Var	Sets the number of milliseconds to delay before the command line suggestion list is displayed	-	2014		
INSBASE	ACAD_Var	Stores the insertion base point set by BASE, which gets expressed as a UCS coordinate for the current space	-			
INSUNITS	ACAD_Var	Specifies a drawing-units value for automatic scaling of BLOCKs, IMAGEs, or XREFs when INSERTed or attached to a drawing	-			
ISAVEBAK	ACAD_Var	Improves the speed of incremental saves, especially for large drawings	-			
JIGZOOMMAX	ACAD_Var	Controls the maximum percentage of the view dimensions that the BLOCK extents must fit when being INSERTed	-	2023		
JIGZOOMMIN	ACAD_Var	Controls the minimum percentage of the view dimensions that the BLOCK extents must fit when being INSERTed	-	2023		
LATITUDE	ACAD_Var	Specifies the latitude of the geographic marker	-			
LAYERDLGMODE	ACAD_Var	Controls whether the legacy or the current LAYER Properties Manager is opened	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
LAYEREVAL	ACAD_Var	Specifies whether the LAYER list is evaluated for new LAYERs when added to the drawing or to attached XREFs	-			
LAYEREVALCTL	ACAD_Var	Controls the Unreconciled New LAYER filter list in the LAYER Properties Manager, which is evaluated for new LAYERs	-			
LAYERFILTERALERT	ACAD_Var	Deletes excess LAYER FILTERS to improve performance	-	2006		
LAYERNOTIFY	ACAD_Var	Specifies when an alert displays when unreconciled new LAYERs are found	-			
LAYER OVERRIDE HIGHLIGHT	ACAD_Var	Toggles the visibility of the background color highlighting for LAYERs that have overrides	-	2018.1		
LAYLOCKFADECTL	ACAD_Var	Controls the amount of fading for objects on locked LAYERs	-			
LAYOUTCREATEVIEWPORT	ACAD_Var	Controls whether a viewport (MVIEW) is created automatically on each new LAYOUT added to a drawing	-			
LAYOUTREGENCTL	ACAD_Var	Specifies how the display list is updated in the Model tab and LAYOUT tabs	-	2018		
LAYOUTTAB	ACAD_Var	Controls whether Model and Layout tabs are displayed or not	-	2015		
LEGACYCODESEARCH	ACAD_Var	Controls whether searching for executable files includes the current and drawing folders	-	2016		
LEGACYCTRLPICK	ACAD_Var	Specifies the [Ctrl] key behavior for SELECTION cycling and subobject SELECTION	-			
LIGHTINGUNITS	ACAD_Var	Specifies the LIGHTing units for the drawing	-			
LINEARBRIGHTNESS	ACAD_Var	Controls the brightness level of the viewport (MVIEW) when using default lighting or generic LIGHTs	-	2017		
LINEARCONTRAST	ACAD_Var	Controls the contrast level of the viewport (MVIEW) when using default lighting or generic LIGHTs	-	2017		
LINEFADING	ACAD_Var	Controls whether line displays are faded when hardware acceleration is on and you have exceeded the line density limits	-	2016		
LINEFADINGLEVEL	ACAD_Var	When hardware acceleration is on, controls the intensity of the line fading effect	-	2016		
LISP SYS	ACAD_Var	Controls the default AutoLISP development environment started with the VLISP command	-	2021		
LOCALE	ACAD_Var	Displays a code that indicates the current language	-	2019		
LOCKUI	ACAD_Var	Locks the location and size of toolbars panels, and dockable windows such as DesignCenter and the Properties palette	-			
LOGEXPBRIGHTNESS	ACAD_Var	Controls the brightness level of the viewport when using photometric LIGHTing	-	2017		
LOGEXP CONTRAST	ACAD_Var	Controls the contrast level of the viewport when using photometric LIGHTing	-	2017		
LOGEXPDAYLIGHT	ACAD_Var	Controls if the exterior daylight flag is enabled when using photometric LIGHTing	-	2017		
LOGEXP MIDTONES	ACAD_Var	Controls the mid tones level of the viewport when using photometric LIGHTing	-	2017		
LOGEXP PHYSICALSCALE	ACAD_Var	Controls the relative brightness of RENDERed MATERIALS in a photometric environment	-	2017		
LOGFILE MODE	ACAD_Var	Specifies whether the contents of the command history are written to a log file	-			
LOGFILE NAME	ACAD_Var	Specifies the path and name of the command history log file for the current drawing	-			
LOGFILE PATH	ACAD_Var	Specifies the path for the command history log files for all drawings in a session	-			
LOGINNAME	ACAD_Var	Displays the current user's login name and is saved with the file properties statistics of *.dwg and related files	-			
LONGITUDE	ACAD_Var	Specifies the longitude of the geographic marker	-			
LTGAPSELECTION	ACAD_Var	Controls whether you can select or snap to the gaps on objects defined with non-continuous LINETYPE	-	2017	2018	
LTSCALE	ACAD_Var	Sets the global LINETYPE scale factor	-			
LUNITS	ACAD_Var	Sets the linear units format for creating objects	-			
LUPREC	ACAD_Var	Sets the display precision for linear units and coordinates	-			
LWDEFAULT	ACAD_Var	Sets the value for the default linewidth (LWEIGHT)	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
LWDISPLAY	ACAD_Var	Controls whether the LWEIGHTs of objects are displayed	-			
LWUNITS	ACAD_Var	Controls whether linewidth (LWEIGHT) units are displayed in inches or in millimeters	-			
MACROINSIGHTSUPPORT	ACAD_Var	Controls whether macro insights can be received based on the command sequences you execute	-	2023		
MACRONOTIFY	ACAD_Var	Controls the notification for macro insights	-	2023		
MARKUPASSISTMODE	ACAD_Var	Controls whether identified markups are highlighted	-	2023		
MARKUPPAPERDISPLAY	ACAD_Var	Indicates whether or not a digital markup is currently active	-	2023		
MARKUPPAPERTRANSPARENCY	ACAD_Var	Controls the level of transparency when a digital markup is active	-	2023		
MARKUPSELECTIONMODE	ACAD_Var	Enables selection using boundary markup border boxes as criteria	-	2024		
MAXACTVP	ACAD_Var	Sets the maximum number of viewports (MVIEW) that can be active at one time in a LAYOUT	-			
MAXSORT	ACAD_Var	Sets the maximum number of items such as file names, LAYER names, and BLOCK names that are sorted alphabetically in dialog boxes, drop-down lists, and palettes	-	2004		
MBUTTONPAN	ACAD_Var	Controls the behavior of the third button or wheel on the pointing device	-			
MEASUREINIT	ACAD_Var	Controls whether a drawing you start from scratch uses imperial or metric default settings	-			
MEASUREMENT	ACAD_Var	Controls whether the current drawing uses imperial or metric HATCH pattern and LINETYPE files	-			
MENUBAR	ACAD_Var	Controls the display of the menu bar	-			
MIRTEXT	ACAD_Var	Controls how MIRROR reflects tekst	-			
MSLTSCALE	ACAD_Var	Scales linetypes displayed on the model tab by the annotation scale	-			
MTEXTAUTOSTACK	ACAD_Var	Controls autostacking for the MTEXT command	-	2015		
MTEXTDETECTSPACE	ACAD_Var	Controls whether the keyboard spacebar is used to create list items in the MTEXT command	-	2015		
MTEXTED	ACAD_Var	Sets the application for editing MTEXT objects	-		2022	
MTEXTEDENCODING	ACAD_Var	Sets the expected encoding to use when reading the output from an external editor while editing MTEXT	-		2022	
MTEXTTOOLBAR	ACAD_Var	Controls the display of the Text Formatting toolbar	-			
MTJIGSTRING	ACAD_Var	Sets the content of the sample text displayed at the cursor location when MTEXT is started	-			
MVIEWPREVIEW	ACAD_Var	Controls the preview behavior when inserting a named or new LAYOUT viewport	-	2019		
NAVBARDISPLAY	ACAD_Var	Controls the display of the navigation bar in all viewports	-			
NAVVCUBEDIPLAY	ACAD_Var	Controls the display of the ViewCube tool in the current visual style and the current viewport	-			
NEWTABMODE	ACAD_Var	Specifies whether clicking the plus sign (+) on the file tab bar displays the New Tab or opens a new drawing	-	2015		
NOMUTT	ACAD_Var	Suppresses the message display (muttering) when it wouldn't normally be suppressed	-			
OBJECTISOLATIONMODE	ACAD_Var	Controls whether hidden objects remain hidden between drawing sessions	-			
OFFSETDIST	ACAD_Var	Sets the default OFFSET distance	-			
OFFSETGAPTYPE	ACAD_Var	Controls how potential gaps between segments are treated when PLINEs are offset	-			
ONLINEDOCMODE	ACAD_Var	Controls the time interval for synchronizing current customization settings with AUTODESK A360	-	2013	2019 (RIP)	
ONLINESYNCTIME	ACAD_Var	Controls the time interval for synchronizing current customization settings with AUTODESK A360	-	2013	2019 (RIP)	
OPENPARTIAL	ACAD_Var	Controls whether a drawing file can be worked on before it is fully open	-		2018.1 (RIP)	
ORBITAUTOTARGET	ACAD_Var	Controls how the target point is acquired for the 3DORBIT command	-	2015		

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
ORTHOMODE	ACAD_Var	Constrains cursor movement to the perpendicular	-			
OSMODE	ACAD_Var	Sets running object snaps	-			
OSNAPCOORD	ACAD_Var	Controls whether coordinates entered on the command line will override running object snaps	-			
OSNAPHATCH	ACAD_Var	Controls whether snapping is available on HATCHes	-	(RIP)		OOPTIONS-var
OSNAPNODELEGACY	ACAD_Var	Controls whether the Node object snap can be used to snap to multiline text objects (MTEXT)	-			
OSNAP OVERRIDE	ACAD_Var	Prevents overrides to default object snap settings	-	2015		
OSOPTIONS	ACAD_Var	Controls whether objects snaps are suppressed on HATCH objects, geometry with negative Z values, or DIMension extension lines	-		2015	
PALETTEOPAQUE	ACAD_Var	Controls whether palettes can be made transparent	-			
PASTESPEC MODE	ACAD_Var	Controls the cell formatting of MICROSOFT Excel data when using PASTESPEC command with the AutoCAD Entities option	-	2023		
PDFIMPORTFILTER	ACAD_Var	Controls what types of data is imported from the *.pdf file and converted to AutoCAD objects	-	2017		
PDFIMPORTIMAGEPATH	ACAD_Var	Specifies the folder where referenced image files are extracted and saved when importing *.pdf files	-	2017		
PDFIMPORTLAYERS	ACAD_Var	Controls what LAYERs are assigned to objects imported from *.pdf files	-	2017		
PDFIMPORTMODE	ACAD_Var	Controls the default processing when importing objects from a *.pdf file	-	2017		
PDFOSNAP	ACAD_Var	Determines whether object snapping is active for geometry in *.pdf underlays that are attached to the drawing	-			
PDFSHX	ACAD_Var	Controls whether text objects using *.shx fonts are stored in *.pdf files as comments when you export a drawing as a *.pdf file	-	2018		
PDFSHXBESTFONT	ACAD_Var	When converting imported *.pdf geometry to text, controls whether the PDFSHXTEXT command uses the best matching font or uses the first selected font that exceeds the recognition threshold.	-	2018		
PDFSHXLAYER	ACAD_Var	Controls what LAYER is assigned to newly created text objects when converting *.shx geometry to text objects	-	2017.1		
PDFSHXTEXTSETTINGS	ACAD_Var		-	2017.1		
PDFSHXTRESHOLD	ACAD_Var	Sets the percentage of the selected geometry that must match a font before the geometry is converted to text objects	-	2017.1		
PDMODE	ACAD_Var	Controls how POINT objects are displayed	-			
PDSIZE	ACAD_Var	Sets the display size for POINT objects	-			
PEDITACCEPT	ACAD_Var	Automatically converts selected objects into PLINES without a prompt when using PEDIT	-			
PELLIPSE	ACAD_Var	Controls the ellipse type created with ELLIPSE	-			
PERIMETER	ACAD_Var	Stores the last perimeter value computed by the AREA, LIST and MEASUREGEOM commands.	-			
PERSPECTIVE	ACAD_Var	Specifies whether the current viewport displays a perspective view	-			
PICKADD	ACAD_Var	Controls whether subsequent SELECTIONs replace the current selection set or add to it	-			
PICKAUTO	ACAD_Var	Controls automatic windowing for object selection	-	2015		
PICKBOX	ACAD_Var	Sets the object SELECTION target height, in device independent pixels	-			
PICKDRAG	ACAD_Var	Controls the method of drawing a SELECTION window	-			
PICKFIRST	ACAD_Var	Controls whether you can SELECT objects before you start a command	-			
PICKSTYLE	ACAD_Var	Controls the use of GROUP SELECTION and associative HATCH selection	-			
PLACEMENTSWITCH	ACAD_Var	Indicates whether placement suggestions are displayed by default as you insert a BLOCK	-	2024		

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
PLINECONVERTMODE	ACAD_Var	Specifies the fit method used when converting SPLINES to PLINES	-			
PLINEGCENMAX	ACAD_Var	Sets the maximum number of segments that a PLINE can have for the application to calculate the geometric center	-			
PLINEREVERSEWIDTHS	ACAD_Var	Controls the appearance of a PLINE when its direction is reversed	-	2013		
PLOTROTMODE	ACAD_Var	Controls the orientation of PLOTS	-			
PLOTTRANSPARENCYOVERRIDE	ACAD_Var	Controls whether object transparency is plotted	-			
POINTCLOUD2DVSDISPLAY	ACAD_Var	Turns off or on the bounding box and text message when viewing a point cloud in the 2D Wireframe visual style	-	2016		
POINTCLOUDAUTOUUPDATE	ACAD_Var	Controls whether a legacy point cloud is regenerated automatically after manipulation, PANning, ZOOMing, or orbiting	-		2015	
POINTCLOUDBOUNDARY	ACAD_Var	Turns the display of a point cloud bounding box on and off	-	2013	2015	
POINTCLOUDCACHESIZE	ACAD_Var	Specifies amount of memory the reserved to display for point clouds	-	2014	2015	
POINTCLOUDCLIPFRAME	ACAD_Var	Determines whether point cloud clipping boundaries are visible or PLOTTed in the current drawing	-	2013	2015	
POINTCLOUDDENSITY	ACAD_Var	Controls the percentage of points displayed for all legacy point clouds in the drawing view	-		2015	
POINTCLOUDEDGEDISPLAY	ACAD_Var	Specifies the type of edge preview displayed in a point cloud	-	2016		
POINTCLOUDLIGHTING	ACAD_Var	Controls the way lighting effects are displayed for a point cloud	-	2015		
POINTCLOUDLIGHTSOURCE	ACAD_Var	Determines the light source for point clouds when lighting is turned on	-	2015		
POINTCLOUDLOCK	ACAD_Var	Controls whether an attached point cloud can be manipulated, moved, cropped, or rotated.	-	2011		
POINTCLOUDLOD	ACAD_Var	Sets the level of density of point display for point clouds	-	2015		
POINTCLOUDPOINTMAX	ACAD_Var	Sets the maximum number of point cloud points that can exist in a drawing	-	2013	2015	
POINTCLOUDPOINTMAXLEGACY	ACAD_Var	Applies only to legacy (pre-2015) point clouds. Sets the maximum number of points that can be displayed for all legacy point clouds attached to the drawing	-	2015		
POINTCLOUDPOINTSIZE	ACAD_Var	Controls the size of the points for new point cloud objects	-	2015		
POINTCLOUDRTDENSITY	ACAD_Var	Improves performance by degrading the number of points displayed while ZOOMing, PANing or orbiting	-		2015	
POINTCLOUDSHADING	ACAD_Var	Specifies whether the brightness of the points in the point cloud are diffuse or specular	-	2015		
POINTCLOUDVISREATIN	ACAD_Var	Controls whether the drawing retains the on or off status of point cloud scan files that are referenced by an attached *.rcp file	-	2014		
POLARADDANG	ACAD_Var	Stores additional angles for polar tracking and polar snap	-			
POLARANG	ACAD_Var	Sets the polar angle increment	-			
POLARMODE	ACAD_Var	Controls settings for polar and object snap tracking	-			
POLYSIDES	ACAD_Var	Sets the default number of sides for the POLYGON command	-			
PRESELECTIONEFFECT	ACAD_Var	Specifies the visual effect used for preselection of objects	-	2015	2020 (RIP)	SELECTIONEFF
PROJECTNAME	ACAD_Var	Assigns a project name to the current drawing	-			
PROJMODE	ACAD_Var	Sets the current Projection mode for TRIMming or EXTENDing	-			
PROPERTYPREVIEW	ACAD_Var	Controls whether you can preview the changes to currently selected objects when you roll over drop-down lists and galleries that control PROPERTIES	-	2013		
PROPOBJLIMIT	ACAD_Var	Limits the number of objects that can be changed at one time with the PROPERTIES and Quick Properties palettes	-			
PROPPREVTIMEOUT	ACAD_Var	Sets the maximum number of seconds for a property preview to display before the preview is automatically cancelled	-	2013		
PROXYGRAPHICS	ACAD_Var	Specifies whether images of proxy objects are saved in the drawing	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
PROXYNOTICE	ACAD_Var	Displays a notice when a proxy is created	-			
PROXYSHOW	ACAD_Var	Controls the display of proxy objects in a drawing	-			
PSLTSCALE	ACAD_Var	Controls the LINETYPE scaling of objects displayed in paper space viewports (MVIEW)	-			
PSTYLEMODE	ACAD_Var	Indicates whether the current drawing is in a Color-Dependent or Named Plot Style mode	-			
PSTYLEPOLICY	ACAD_Var	Controls the plot style mode, Color-Dependent or Named, that is used when opening a drawing that was created in a release prior to AutoCAD 2000 or when creating a new drawing from scratch without using a drawing template	-			
PUBLISHALLSHEETS	ACAD_Var	Specifies whether to load the contents of the active document or of all open documents in the Publish dialog box	-			
PUSHTODOCSSTATE	ACAD_Var	Indicates whether the Push to AUTODESK Docs palette is open or closed	-	2022		
QCSTATE	ACAD_Var	Indicates whether the QUICKCALC calculator is open or closed	-			
QPLOCATION	ACAD_Var	Sets the location for the Quick Properties palette	-			
QPMODE	ACAD_Var	Controls whether the Quick Properties palette is displayed when objects are selected	-			
QTEXTMODE	ACAD_Var	Controls whether the Quick Properties palette is displayed when objects are selected	-			
QVDRAWINGPIN	ACAD_Var	Controls the default display state of preview images of drawings	-			
QVAYOUTUPPIN	ACAD_Var	Controls the default display state of preview images of Model Space and LAYOUTs in a drawing	-			
RASTERPREVIEW	ACAD_Var	Controls whether thumbnail preview images are created and saved with the drawing	-			
RECOVERMODE	ACAD_Var	Controls whether drawing recovery information is recorded after a system failure	-			
REFEDITNAME	ACAD_Var	Displays the name of the reference being edited	-			
REFPATHTYPE	ACAD_Var	Controls whether reference files are attached using full, relative or no path when first attached to a host drawing file	-	2018		
REGENMODE	ACAD_Var	Controls automatic REGENeration of a drawing	-		2018 (RIP)	
REMEMBERFOLDERS	ACAD_Var	Controls the default path displayed in standard file selection dialog boxes	-			
RENDERENVSTATE	ACAD_Var	Indicates whether the RENDER Environment & Exposure palette is open or closed	-	2016		
RENDERLEVEL	ACAD_Var	Specifies the number of iterations, or levels, the render engine performs to create the RENDERed image	-	2016		
RENDERLIGHTCALC	ACAD_Var	Controls the rendering accuracy of LIGHTs and MATERIALs	-	2016		
RENDERPRESSTATE	ACAD_Var	Indicates whether the RENDER Presets Manager palette is open or closed	-		2016	
RENDERQUALITY	ACAD_Var	Specifies the maximum number of samples to take when shading a pixel	-		2017	
RENDERTARGET	ACAD_Var	Controls the duration to use for RENDERing	-	2016		
RENDERTIME	ACAD_Var	Specifies the number of minutes that the RENDER engine uses to iteratively refine a RENDERed image.	-	2016		
REVCLoudAPPROXARCLen	ACAD_Var	Stores the current approximate ARC length for revision clouds	-	2020		
REVCLoudARCvariance	ACAD_Var	Controls whether revcloud ARCs are created with varying or uniform chord lengths	-	2021		
REVCLoudCreateMode	ACAD_Var	Specifies the default input for creation of revision clouds	-			
REVCLoudGrips	ACAD_Var	Controls the number of GRIPS displayed on a revision cloud	-			
REVCLoudMaxArcLength	ACAD_Var	Stores the maximum arc length for revision clouds	-		2020 (RIP)	REVCLoudApp
REVCLoudMinArcLength	ACAD_Var	Stores the minimum arc length for revision clouds	-		2020 (RIP)	REVCLoudApp
RIBBONGLOAD	ACAD_Var	Controls whether RIBBON tabs are loaded into memory by a background process during idle processor time	-			
RIBBONSTATE	ACAD_Var	Indicates whether the RIBBON palette is open or closed	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
ROLLOVEROPACITY	ACAD_Var	Controls the transparency of a palette while the cursor moves over the palette	-			
ROLLOVERTIPS	ACAD_Var	Controls the display of rollover TOOLTIPS when the cursor hovers over an object	-			
SAFEMODE	ACAD_Var	Indicates whether executable code can be loaded and executed in the current AutoCAD session	-		2014	
SAVEFILE	ACAD_Var	Stores the current automatic SAVE file name	-			
SAVETIME	ACAD_Var	Sets the automatic SAVE interval, which is measured in minutes	-		2018	
SDI	ACAD_Var		-			
SECTIONOFFSETINC	ACAD_Var	Sets the default increment value for the section object slice thickness control	-	2016		
SECTIONTHICKNESSINC	ACAD_Var	Sets the default increment value for section object offset control	-	2016		
SECURELOAD	ACAD_Var	Controls whether executable files are restricted to being loaded from trusted folders only	-	2014	2019	SECUREREMOT
SECUREREMOTEACCESS	ACAD_Var	Controls whether files are restricted from being accessed from internet locations or from remote servers	-	2019	2020.1	
SELECTIONANNODISPLAY	ACAD_Var	Controls whether alternate scale representations are temporarily displayed in a dimmed state when an annotative object is selected	-			
SELECTIONAREA	ACAD_Var	Controls the display of effects for SELECTION areas	-			
SELECTIONAREAOPACITY	ACAD_Var	Controls the transparency of the SELECTION area during window and crossing selection	-			
SELECTIONCYCLING	ACAD_Var	Controls the display options associated with overlapping objects and selection cycling	-			
SELECTIONEFFECT	ACAD_Var	Specifies the visual effect used when objects are SELECTEd	-		2020	
SELECTIONOFFSCREEN	ACAD_Var	Controls if objects that are moved off screen during selection, remain in the selection set	-	2017.1		
SELECTIONPREVIEW	ACAD_Var	Controls the display of selection previewing	-			
SELECTIONPREVIEWLIMIT	ACAD_Var	Limits the number of objects that can display preview highlighting during a window or crossing selection.	-	2013	2015	
SELECTLASTMODE	ACAD_Var	Limits the number of objects that can display preview highlighting during a window or crossing selection.	-	2013	2015	
SELECTSIMILARMODE	ACAD_Var	Controls which PROPERTIES must match for an object of the same type to be selected with SELECTSIMILAR	-			
SETBYLAYERMODE	ACAD_Var	Controls which properties are selected for the SETBYLAYER command	-			
SHAREVIEWPROPERTIES	ACAD_Var	Controls whether drawing properties are included with shared views	-	2019		
SHAREVIEWTYPE	ACAD_Var	Controls whether a shared view is created from the current view, Model Space or a layout, or created from the entire drawing	-	2019		
SHOWNEWSTATE	ACAD_Var	Indicates whether highlighting new features in updates is active	-	2017.1		
SHOWPAGESETUPFORNEWLAYOUTS	ACAD_Var	Specifies whether the PAGESETUP Manager is displayed when a new LAYOUT is created	-			
SIGWARN	ACAD_Var	Controls whether a warning is presented when a file with an attached digital signature is opened	-	2004		
SMOOTHMESHMAXFACE	ACAD_Var	Sets the maximum number of faces permitted for mesh objects	-		2016	
SNAPANG	ACAD_Var	Sets the snap and grid rotation angle for the current viewport relative to the current UCS	-			
SNAPGRIDLEGACY	ACAD_Var	Specifies whether the GRID SNAP is active only when specifying a point, or also during object selection.	-	2013		
SNAPMODE	ACAD_Var	Turns the SNAP mode on and off in the current viewport	-			
SNAPSTYL	ACAD_Var	Sets the GRID and grid snap to rectangular or isometric for the current viewport	-			
SNAPUNIT	ACAD_Var	Sets the SNAP spacing for the current viewport	-			
SORTENTS	ACAD_Var	Controls object sorting in support of DRAWORDER for several operations	-		2019	
SORTORDER	ACAD_Var	Specifies whether the LAYER list is ordered using a natural sort order or ASCII values	-	2015		

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
SPLDEGREE	ACAD_Var	Stores the last-used degree setting for splines and sets the default degree setting for the SPLINE command when specifying control vertices	-			
SPLINESEGS	ACAD_Var	Sets the number of line segments to be generated for each spline-fit polyline generated by the Spline option of the PEDIT command	-			
SPLKNOTS	ACAD_Var	Stores the default knot option for the SPLINE command when specifying fit points	-			
SPLMETHOD	ACAD_Var	Stores whether the default method used for the SPLINE command is fit points or control vertices	-			
SSMDETECTMODE	ACAD_Var	Determines which Sheet Set Manager is displayed when opening cloud-based *.dst files	-	2023		
STANDARDSVIOLATION	ACAD_Var	Specifies whether a user is notified of STANDARDS violations in the current drawing when a nonstandard object is created or modified	-			
STARTINFOLDER	ACAD_Var	Stores the drive and folder path from where the product was started	-	2016		
STARTMODE	ACAD_Var	Controls whether the Start tab is displayed	-	2016		
STARTUP	ACAD_Var	Controls what displays when the application is started, or when a new drawing is opened	-	2004	2015	
STATUSBAR	ACAD_Var	Controls the display of the STATUSBAR	-			
STATUSBARSTATE	ACAD_Var	Indicates whether the STATUSBAR is visible or not	-	2015		
STUDENTDRAWING	ACAD_Var	Reports whether the current drawing was saved with an AUTODESK Student Version product	-	2019	2022	
STYLUSFORCETHRESHOLD	ACAD_Var	Controls the stylus force press threshold	-	2023		
SUBOBJSELECTIONMODE	ACAD_Var	Filters whether faces, edges, vertices or solid history subobjects are highlighted when you roll over them	-			
SYSFLOATING	ACAD_Var	Controls the dock state of the drawing file tabs	-	2022		
SYSMON	ACAD_Var	Specifies whether changes to system variables values are monitored	-	2016		
TABELINDICATOR	ACAD_Var	Controls the display of row numbers and column letters when the In-Place Text Editor is open for editing a table cell	-			
TDCREATE	ACAD_Var	Stores the local time and date the drawing was created	-		2017	
TDINDWG	ACAD_Var	Stores the total editing time, which is the total elapsed time between saves of the current drawing	-		2017	
TDUCREATE	ACAD_Var	Stores the universal time and date that the drawing was created	-		2017	
TDUPDATE	ACAD_Var	Stores the local time and date of the last update/save	-		2017	
TEMPOVERRIDES	ACAD_Var	Turns temporary override keys on and off for drawing aids	-			
TEXTALIGNMODE	ACAD_Var	Stores the alignment option for aligned tekst	-	2015		
TEXTALIGNSPACING	ACAD_Var	Stores the spacing option for aligned tekst	-	2015		
TEXTALLCAPS	ACAD_Var	Converts all new text created by TEXT or MTEXT to uppercase	-	2015		
TEXTAUTOCORRECTCAPS	ACAD_Var	Controls whether or not Caps Lock is automatically turned off for Multiline text (MTEXT) and TEXT	-	2015		
TEXTEDITMODE	ACAD_Var	Controls whether the TEXTEDIT command repeats automatically	-	2017		
TEXTEVAL	ACAD_Var	Controls how text strings entered with TEXT (using AutoLISP) or with -TEXT are evaluated	-			
TEXTFILL	ACAD_Var	Controls whether TrueType fonts are filled-in for PLOTting	-			
TEXTGAPSELECTION	ACAD_Var	Controls whether you can select TEXT or MTEXT objects within the gaps or spaces between the characters	-	2021		
TEXTJUSTIFY	ACAD_Var	Displays the default justification used by the TEXT command to create single-line TEXT	-	2014		
TEXTLAYER	ACAD_Var	Specifies a default LAYER for new TEXT and MTEXT text objects in the current drawing	-	2020.1		
TEXTQLTY	ACAD_Var	Sets the resolution of TrueType text for plotting and RENDERing	-			
TEXTSIZE	ACAD_Var	Sets the default text height when creating new text objects	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
TEXTSTYLE	ACAD_Var	Sets the name of the current text style	-			
THICKNESS	ACAD_Var	Sets the default 3D thickness property when creating 2D geometric objects	-			
THUMBSAVE	ACAD_Var	Controls whether preview images are saved with the drawing	-	2013		
THUMBSIZE2D	ACAD_Var	Controls whether thumbnail previews of drawings using the 2D Wireframe visual style are set to a display resolution of 256 x 256 pixels	-	2018.1		
TILEMODE	ACAD_Var	Controls whether paper space can be accessed	-			
TIMEZONE	ACAD_Var	Sets the time zone for the sun in the drawing	-			
TINDWG	ACAD_Var	Stores the total editing time, which is the total elapsed time between saves of the current drawing.	-			
TOOLTIPMERGE	ACAD_Var	Combines drafting tooltips into a single tooltip	-			
TOOLTIPS	ACAD_Var	Controls the display of tooltips on the RIBBON, TOOLBARS, and other user interface elements	-	2020.1		
TOOLTIPSIZE	ACAD_Var	Sets the display size for drafting tooltips, and dynamic input tekst	-			
TOOLTIPTRANSPARENCY	ACAD_Var	Sets the transparency for drafting tooltips	-			
TOUCHMODE	ACAD_Var	For those using a touch-enabled screen or interface, controls the display of the Touch panel on the RIBBON	-	2014		
TRACECURRENT	ACAD_Var	Displays the name of the active TRACE	-	2022		
TRACEDIPLAYMODE	ACAD_Var	Indicates whether the tracing paper effect is displayed (front) or not (back) while a TRACE is active	-	2022		
TRACEFADECTL	ACAD_Var	Controls the amount of fading when TRACEMODE is active	-	2022		
TRACEMARKUPFADECTL	ACAD_Var	Controls the transparency of faded markups. The lower the number, the more visible the markup is	-	2024		
TRACEMODE	ACAD_Var	Indicates whether TRACE is active and which mode is current	-	2022		
TRACEOSNAP	ACAD_Var	Controls whether object snaps apply to trace geometry while viewing a TRACE	-	2022		
TRACEPALETTTESTATE	ACAD_Var	Reports whether the TRACE Palette is open or closed	-	2022		
TRACEPAPERCTL	ACAD_Var	Controls the opaqueness of the tracing paper effect.	-	2022		
TRACEVPSUPPORT	ACAD_Var	Controls whether markup boxes are actionable within a currently active model space viewport	-	2024		
TRACKPATH	ACAD_Var	Controls the display of polar and object snap tracking alignment paths	-			
TRANSPARENCYDISPLAY	ACAD_Var	Controls whether the transparency property assigned to individual objects or bylayer is visible or suppressed	-			
TREGENAUTO	ACAD_Var	Controls automatic REGENERation in real-time PANning and ZOOMing operations	-	2021		
TRIMEDGES	ACAD_Var	Controls whether TRIMming and EXTENDING to HATCHes with Quick mode is limited to the edges of the HATCHes or includes the objects within HATCH patterns	-	2021		
TRIMEXTENDMODE	ACAD_Var	Controls whether the TRIM and EXTEND commands use streamlined inputs by default	-	2021		
TRIMMODE	ACAD_Var	Controls whether selected edges for chamfers and fillets are trimmed	-			
TRUSTEDDOMAINS	ACAD_Var	Controls the domain names or URLs from which AutoCAD can run JavaScript code	-	2014		
TRUSTEDPATHS	ACAD_Var	Controls the folders from where AutoCAD can load and execute files that contain executable code	-	2014		
UCSDTECT	ACAD_Var	Controls whether dynamic UCS acquisition is active when creating objects involving 3D planar surfaces	-			
UCSFOLLOW	ACAD_Var	Generates a plan view whenever you change from one UCS to another	-			
UCSICON	ACAD_Var	Controls the visibility and placement of the UCS icon	-			
UCSSELECTMODE	ACAD_Var	Controls whether the UCSICON can be SELECTed and manipulated with GRIPS	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
UCSVP	ACAD_Var	Determines whether the UCSs in other viewports are dependent or independent of the UCS of the current viewport	-			
UNDOCTL	ACAD_Var	Displays the options used in the UNDO command	-			
UPDATETHUMBNAIL	ACAD_Var	Controls updating of the thumbnail previews for VIEWS and LAYOUTs	-			
VIEWSKETCHMODE	ACAD_Var	Turns the view sketching state on or off	-	2013		
VIEWUPDATEAUTO	ACAD_Var	Specifies whether Model Documentation views are updated automatically when changes are pending	-	2013		
VISRETAIN	ACAD_Var	Controls the properties of XREF-dependent LAYERs	-			
VISRETAINMODE	ACAD_Var	Controls the behavior of the VISRETAIN system variable when it's set to 1	-	2018.1		
VPCONTROL	ACAD_Var	Controls whether the menus for viewport tools, views, and visual styles that are located in the upper-left corner of every viewport are displayed	-			
VPLAYEROVERIDES	ACAD_Var	Indicates if there are any LAYERs with viewport (VP) property overrides for the current LAYOUT viewport	-			
VPLAYEROVERIDESMODE	ACAD_Var	Controls whether LAYER property overrides for LAYOUT viewports (MVIEW) are displayed and PLOTted	-			
VPROTATEASSOC	ACAD_Var	Controls whether the view within a viewport (MVIEW) is rotated with the viewport when the viewport is ROTATEed	-			
VSEDGES	ACAD_Var	Controls the types of edges that are displayed in the viewport	-			
VSFACECOLORMODE	ACAD_Var	Controls how the COLOR of faces is calculated	-			
VSFACEOPACITY	ACAD_Var	Turns on and off a preset level of transparency for 3D objects	-			
VSFACESTYLE	ACAD_Var	Controls how faces, solid-fill HATCHes, and GRADIENTs are displayed in the current viewport	-			
VSHIDEPRECISION	ACAD_Var	Controls the accuracy of HIDEs and SHADEs in the visual style applied to the current viewport	-		2018 (RIP)	
VSSHADOWS	ACAD_Var	Controls whether a visual style displays shadows	-			
WBLOCKCREATEMODE	ACAD_Var	Sets the behavior for selected objects after saving the blocks as a file	-	2022		
WHIPTHREAD	ACAD_Var	Controls whether to use an additional processor to improve the speed of operations such as ZOOM that REDRAW or REGENerate the drawing	-	2000i	2020	
WIPEOUTFRAME	ACAD_Var	Controls the display of frames for WIPEOUT.	-	2013		
WORKINGFOLDER	ACAD_Var	Stores the drive and folder path of the operating system's working folder or current directory for the process, which can be of interest to developers	-	2016		
WORKSPACELABEL	ACAD_Var	Controls whether to display the name of the current WORKSPACE in the STATUSBAR	-			
WSAUTOSAVE	ACAD_Var	Saves changes you made to a workspace when you switch to another WORKSPACE	-			
WSCURRENT	ACAD_Var	Displays the current WORKSPACE name at the Command prompt and sets a specified WORKSPACE to be the current one	-			
XCOMPAREBAKPATH	ACAD_Var	Specifies the path where the backup XREF file is stored	-	2021		
XCOMPAREBAKSIZE	ACAD_Var	Sets the size of the folder where the backup XREF file is stored	-	2021		
XCOMPARECOLORMODE	ACAD_Var	Switches the visual effect of objects in the host drawing during an XREF comparison	-	2021		
XCOMPAREENABLE	ACAD_Var	Enables the comparison between an XREF and the referenced drawing file	-	2021		
XDWGFADECTL	ACAD_Var	Controls the dimming for all *.dwg XREF objects	-			
XEDIT	ACAD_Var	Controls whether the current drawing can be edited in-place when being referenced by another drawing	-			
XFADECTL	ACAD_Var	Controls the amount of fading within a reference being edited in place. This setting affects only the objects that are not being edited in the reference	-			
XLOADCTL	ACAD_Var	Turns XREF demand-loading on and off, and controls whether it opens the referenced drawing or a copy	-			

Trefwoord	Categorie	Beschrijving	Pagina	NieuwVanaf	AangepastIn	VervangenDoor
XREFLAYER	ACAD_Var	Specifies a default LAYER for a new XREF	-	2018		
XREFNOTIFY	ACAD_Var	Controls the notification for updated or missing XREFs	-			
XREFOVERRIDE	ACAD_Var	Controls the display of object properties on referenced layers.	-	2016		
XREFREGAPPCTL	ACAD_Var	Controls whether the registered application (RegApp) records stored in an XREF being loaded are copied to the host drawing	-	2018		
XREFTYPE	ACAD_Var	Controls the default reference type when attaching or overlaying an external reference	-			
ZOOMFACTOR	ACAD_Var	Controls how much the magnification changes when the mouse wheel moves forward or backward	-			
ZOOMWHEEL	ACAD_Var	Toggles the direction of transparent ZOOM operations when you scroll the middle mouse wheel	-			